

Seaory S28 Desktop Double-side Card Printer

Quick User Guide



Shenzhen Seaory Technology Co., Ltd.

1. Unpacking and inspection

1) Open the top cover ,you will see following items:




Accessories box

Output hopper

card printer

PE foam

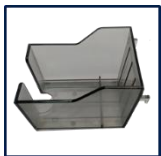

1PC output hopper



1PC power adapter



1PC power cable



1PC USB cable




1PC weight module



1PC cleaning roller



5pcs cleaning card

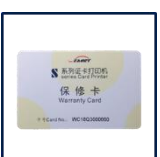

1PC warranty card



1PC cleaning stick




1PC ICARDE software CD



If the above accessories are in short supply, please contact your local distributor immediately.

3) Appearance introduction:

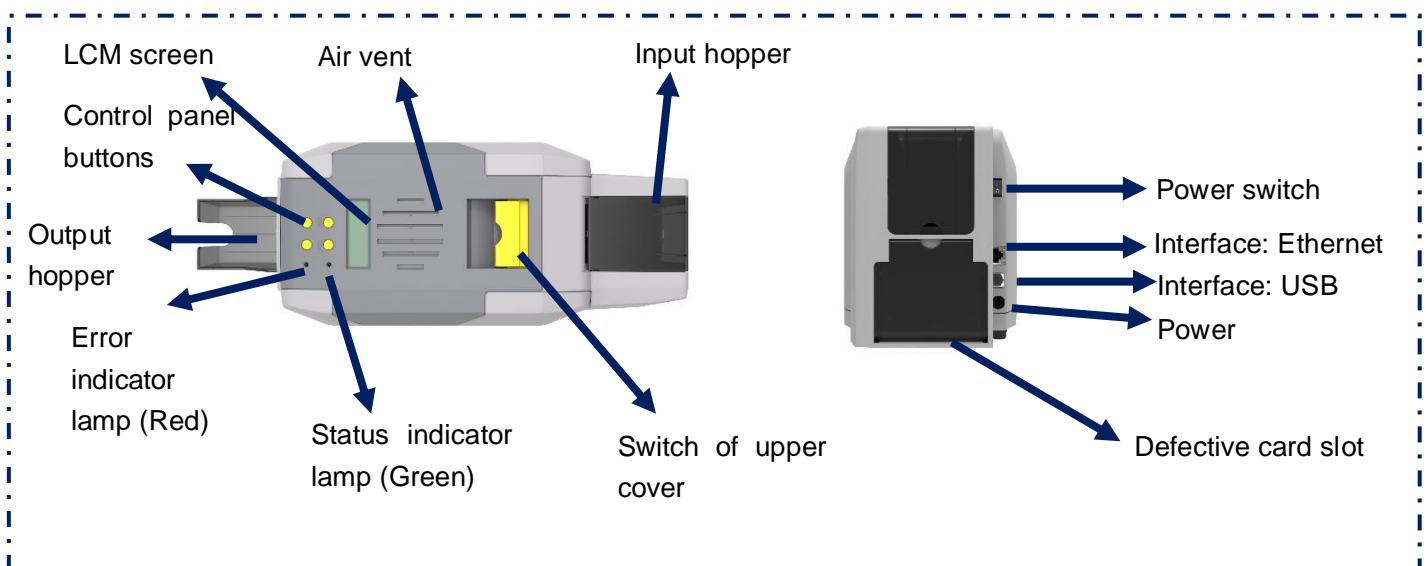


2. Cleaning Roller Installation




Ribbon cartridge




1. Gently lift the upper cover switch.

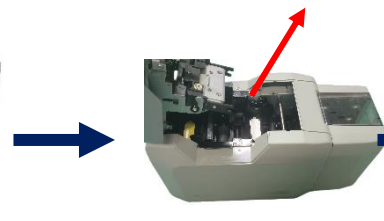

2. Open upper cover, take out the ribbon cartridge.

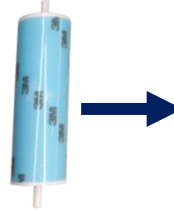

3. Remove 3M hyaline layer on cleaning roller surface.

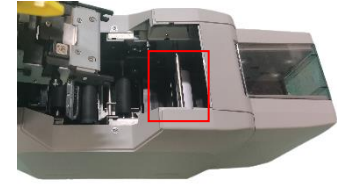

4. Take the cleaning roller's both sides by hand. After pushing into the mounting position, gently press down.



The purpose of the cleaning wheel is to absorb the dust on the card and improve the printing effect. Replace cleaning roller after every roll of ribbon use up.

3. Ribbon Installation



1. Open the upper cover, take out the ribbon cartridge, install the ribbon into the cartridge according to the color direction.



2. Yellow roller supply with unused ribbon. White roller supply with used ribbon.



3. Take ribbon cartridge's side, Yellow roller close to the Back-end card exit mouth, install the ribbon cartridge.




In order to ensure the normal use of the printer, please use Seaory original ribbon.

4. Place the card, Add the weight module



1. Open the input hopper dust cap.

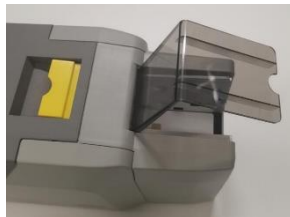

2. Place the card into the input hopper. Contact chip cards require the chip face up, otherwise data can't be read or written to the chip card.




3. Add the weight module. Its function is to increase the friction between the card and the roller, making the card feeding more smooth.

5. Adjust the thickness of card feeding entrance



1. Open the upper cover.

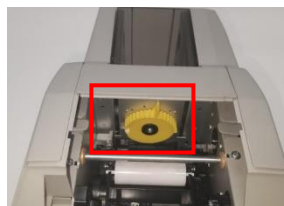


2. Move the yellow lever to adjust the feed card thickness.



3. Support 0.3mm to 1.0mm thickness cards. Factory preset thickness is 0.8mm.

The feed card thickness needs to be adjusted according to the card's actual thickness. Like when it's 0.76mm standard card, the feed card thickness can be set at 0.8mm. If the card feed thickness value is set too high, it is easy to enter two cards at the same time; if it is set too small, it is easy to fail to enter the card.

6. Output Hopper Installation

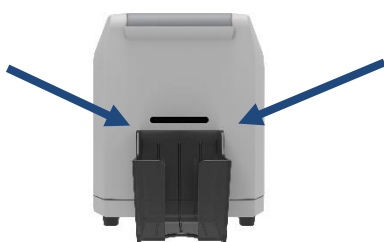

1. Attach output hopper to the hole where the arrow points.




2. Installation finished.

i The card slot is used to connect printed cards, please keep it properly.

7. Driver installation

7.1 Hardware Connections

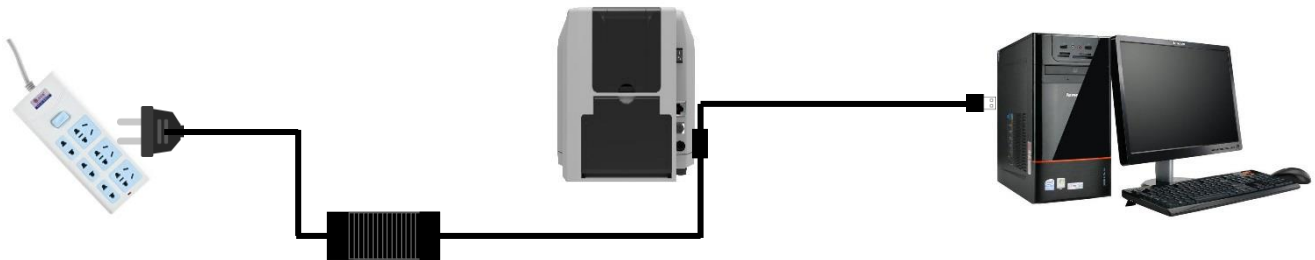

1. Power adapter 24V connector is inserted into card printer power interface. Connect the power cable to the power adapter. Then plug the power cable into the mains socket. But do not power on until the driver installation is complete.

2. Connect the square port of the USB cable to the card printer and connect the flat port to the USB port of the computer.

7.2 Install the Driver

Download the installation package from the CD in the accessory box or the company's official website www.seaory.com. And install the driver according to the software installation process prompts or the product instruction manual of this model




Seaory_S_series_driver-1.6.0.0

8. Print test

Method 1: Driver Test Page


Step 1: In the list of printers and devices → right-click the Seaory S28 printer icon → printer properties.

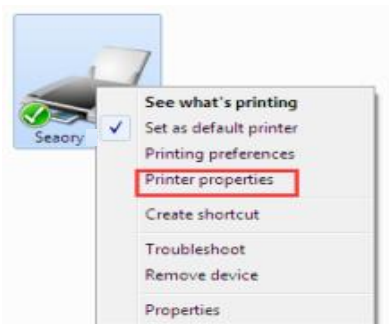

Seaory S28 desktop card printer quick user guide



Step 2: After enter below picture interface, place some white card into input hopper, then click "Print Test Chart"

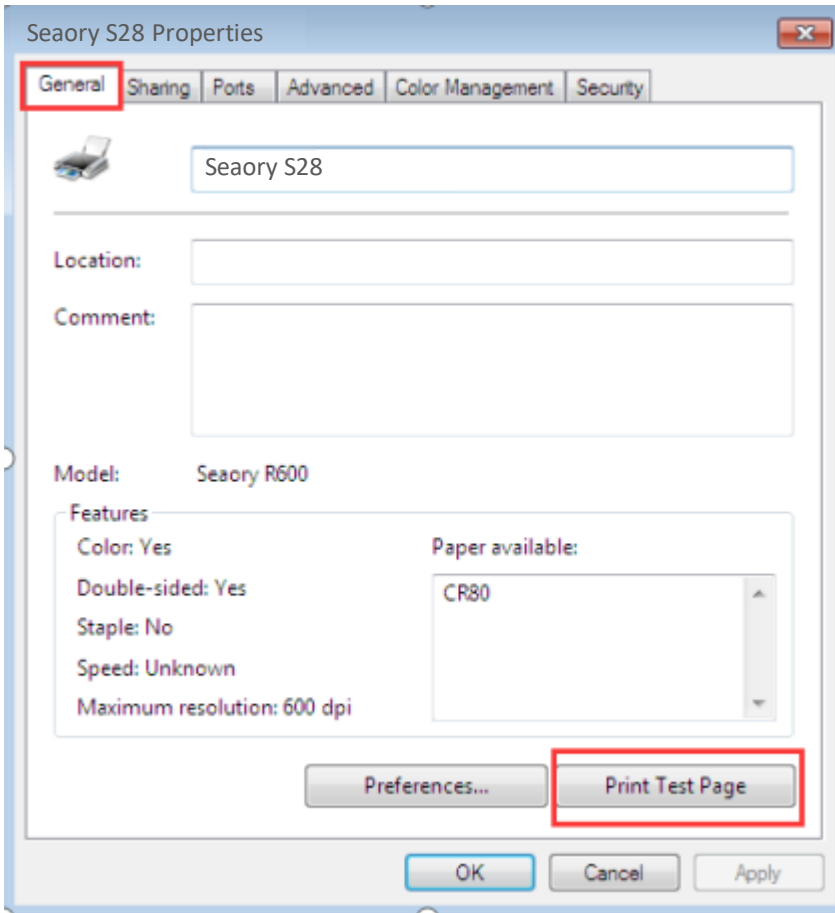

Step 3: When print out the following card, that's mean the driver program and hardware installation are normal.



Method 2: Provide iCARDE printing software with printer

After all the above steps are completed, relevant software can be used to print and test the card printer. You can also do print test through Seatory's iCARDE software. For details, please refer to Seatory iCARDE manual.

